
Chapter 3 Sharpy Beam 260W Channel description

3.1 16 Channel table

Table 1 Channel brief

CH1	Pan	0-255	0-540°
CH2	Pan fine	0-255	0-2°
CH3	Tilt	0-255	0-270°
CH4	Tilt fine	0-255	0-1°
CH5	XY Speed	0-255	From fast to slow
CH6	Dimmer	0-255	Dimming from 0-100%
CH7	Strobe	0-3	Lamp off
		4-103	Slow strobe to fast strobe
		104-107	Lamp on
		108-207	Slow strobe to fast strobe(mode 2)
		208-212	Lamp on
		213-251	Free strobe
		252-255	White
CH8	Frost	0-127	
		128-255	Insert frost
CH9	Color	0-4	White
		5-9	White + COLOR1
		10-14	COLOR1
		15-19	COLOR1 + COLOR2
		20-24	COLOR2
		25-29	COLOR2 + COLOR3
		30-34	COLOR3
		35-39	COLOR3 + COLOR4
		40-44	COLOR4
		45-49	COLOR4 + COLOR5
		50-54	COLOR5
		55-59	COLOR5 + COLOR6
		60-64	COLOR6
		65-69	COLOR6 + COLOR7
		70-74	COLOR7
		75-79	COLOR7 + COLOR8
		80-84	COLOR8
		85-89	COLOR8 + COLOR9
		90-94	COLOR9
		95-99	COLOR9 + COLOR10

		100-104	COLOR10
		105-109	COLOR10 + COLOR11
		110-114	COLOR11
		115-119	COLOR11 + COLOR12
		120-124	COLOR12
		125-129	COLOR12 + COLOR13
		130-134	COLOR13
		135-139	COLOR13 + WHITE
		140-197	Rotate forward (fast to slow)
		198-255	Rotate reverse (slow to fast)
CH10 6	Gobo	0-4	White
		5-9	GOBO1
		10-14	GOBO2
		15-19	GOBO3
		20-24	GOBO4
		25-29	GOBO5
		30-34	GOBO6
		35-39	GOBO7
		40-44	GOBO8
		45-49	GOBO9
		50-54	GOBO10
		55-59	Rotate forward (fast to slow) GOBO11
		60-64	GOBO12
		65-69	GOBO13
		70-125	Rotate reverse (fast to slow)
		126-130	Stop
		131-190	Rotate reverse (slow to fast)
		191-195	Shake slow to fast GOBO1
		196-200	Shake slow to fast GOBO2
		201-205	Shake slow to fast GOBO3
		206-210	Shake slow to fast GOBO4
		211-215	Shake slow to fast GOBO5
		216-220	Shake slow to fast GOBO6
		221-225	Shake slow to fast GOBO7
		226-230	Shake slow to fast GOBO8
		231-235	Shake slow to fast GOBO9
		236-240	Shake slow to fast GOBO10
		241-245	Shake slow to fast GOBO11
		246-250	Shake slow to fast GOBO12
		251-255	Shake slow to fast GOBO13
CH11	Prism	0-63	None

		64-127	Prism1
		128-191	Prism2
		192-255	Prism1+Prism2
CH12	Prism Rot	0-127	0-400 degrees
		128-187	Rotate forward (fast to slow)
		188-195	Stop
		196-255	Rotate reverse (slow to fast)
CH13	7 Colorful	0-127	None
		128-255	Insert 7 colorful
CH14	Focus	0-255	From far to near
CH15	Reserve	0-255	
CH16	Lamp Reset	100-105	Turn off the lamp in more than 5 seconds
		200-205	Turn on the lamp in more than 5 seconds
		210-215	Reset XY in more than 5 seconds
		220-235	Reset effect motor in more than 5 seconds
		240-255	Reset in more than 5 seconds